
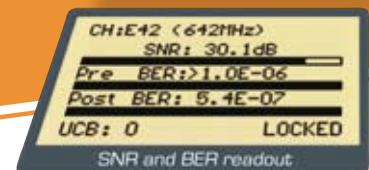
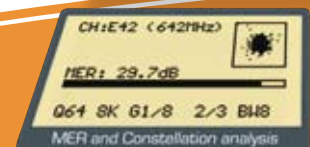


# DigiAir PRO

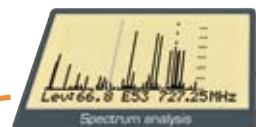

## FEATURES

- Frequency range of 45-860MHz.
- The meter to use for easy Digital terrestrial installations.
- Very sensitive, easy to maximize weak and strong signals.
- Signal level reads out in dBuV.
- Presents one channel readout with high resolution or six channels simultaneously or the complete spectrum.
- Built in beeper (pitch tone) and maxhold function.
- Aerial power output, 0, 5 and 12V.
- Built in, rechargeable battery.
- Power supply and car-charger enclosed.
- Carrying-case enclosed.
- Small and handy design.
- Made in Sweden.

emitor

# DigiAir PRO

## Emitor's DIGIAIR PRO is developed in Sweden for exact alignment and adjustment of terrestrial antennas.

This is made for both analog (dBuV) and digital (BER and SNR).

DIGIAIR Pro is microprocessor controlled, making it very reliable and accurate.

Signal strength is presented on the LCD-display. In analog mode it shows a single channel or six channels at the same time. You can also choose to view the signal in spectrum mode.

In digital mode it displays the BER (bit error rate) and SNR (signal/noise ratio). Readout of UCB (uncorrected bits) and CB (corrected blocks) is also easy to do.

Furthermore DIGIAIR Pro present pitchtones (the higher tone the stronger signal) on a loudspeaker.

DIGIAIR Pro is very sensitive and can detect even the weakest signals.

DIGIAIR Pro can feed Voltage (5/12 Volt) to external active antennas this feature is short-circuit protected by an automatic fuse.

DIGIAIR Pro is charged via an external DC power-source of 13,5 - 18 volt.

The DIGIAIR Pro operates with 8xAA rechargeable batteries.

The unit will work for at least 2 hours with fully charged batteries.

Even though the DIGIAIR Pro has a lot of functions it is still very easy to use and has a very compact design.

## Technical specification

<b>Input frequency:</b>	45-860 MHz.
<b>Input level:</b>	30-80 dBuV.
<b>Input impedance:</b>	75 Ohm, F-connector.
<b>Short circuit protection:</b>	Automatic fuse on antenna input.
<b>Measuring method:</b>	in digital Two bars showing BER (bit error rate) and SNR (signal/noise ratio).
<b>in analog</b>	One bar showing dBuV in high resolution or 6 bars showing strength of 6 channels. Spectrum display. Pitch tone indication from beeper.
<b>Signal-level readout:</b>	digital BER and SNR values.
<b>analog</b>	dBuV with maxhold-function.
<b>Power out:</b>	0V, 5V, 12V and 24V on/off.
<b>Power supply/charger:</b>	10 - 18V DC (Centerpin +).
<b>Display:</b>	Back-lighted 128x64 Pixels LCD.
<b>Power consumption:</b>	500mA.
<b>Battery:</b>	8x AA rechargeable batteries of 1200mA each.
<b>Weight:</b>	0.3 kg.
<b>Dimensions:</b>	185 x 115 x 50 mm.
<b>Accessories:</b>	Power supply 12V DC, 1A Rubber-case. Power supply. Car charger.



Sjövicksbacken 14  
SE-117 43 Stockholm, Sweden  
Phone: +46 (0)8 775 00 01  
Fax: +46 (0)8 775 00 06  
[www.emitor.se](http://www.emitor.se)

Distributor: