About your Blade Stream Box
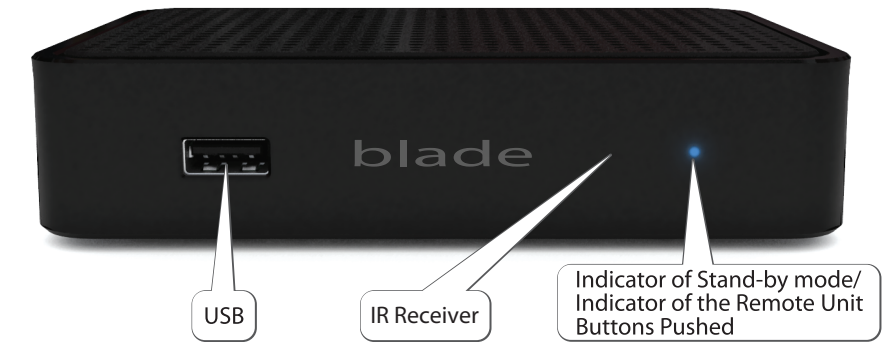
Thank you for purchasing our product Blade Stream, which makes it possible to possess access to TV and movies through your digital television service.

You can control all functions of Blade Stream by using the remote control for navigating on screen menu provided by your service provider.

Getting Started

Please become acquainted in the next chapter how unpack and turn on power supply your new box.

In case your product has been already adjusted for you by your provider look into "Use of Remote Control to control the device" for information how to use the product.

USB

IR Receiver

Indicator of Stand-by mode/ Indicator of the Remote Unit Buttons Pushed

Connecting on the Back Panel

USB Ethernet 10/100 HDMI 4-pin 3,5 mm jack Composite video output Stereo line output Power supply

Digital TV Connecting to the Network

Blade Stream receives TV channels and movies from the "internet digital TV" network.

If you have a contract with a service provider, it is likely your box is already pre-configured, and only needs connecting to the internet.
• Connect your internet cable (Ethernet RJ45) to your set top box and ensure you have an internet connection.

After the product is removed from the package it is necessary to handle it with care, do not drop, shake it or treat it roughly.

The product is designed for horizontal allocation onto flat surface.

Do not place the product onto slippery surface, in place where it may be exposed to vibration or hazard to drop and other possible risks to the product to be damaged which may cause invalidating of the product guarantee.

Do not mount the product onto soft surface like on the carpet, bed, etc., for such surfaces cease access to the ventilation openings and complicate air flow that may cause the product to overheat and to invalidate guarantee as result.

Do not locate the product in a location where airflow and ventilation may be hindered, as this may cause the product to overheat, resulting in unstable operation and damage.

Do not place the product in places where it may be exposed to influence of direct sunlight, next to the sources of open fire and convectors.

Do not place the product on surfaces which in operating process may get warm, for instance:-

video record player or intensifier and do not put anything on the top of the box itself.

Do not cover the product with anything. Containing liquids objects, such as vase, plant pot are not to be placed next to or on the product.

Do not touch or move the product during its operation. Switch off the product if you need to shift it.

The product is intended for use indoors. The power supply cord is to be put to prevent its deformation and jamming and touching it

with other objects as well. The power supply cord is not to be laid under the carpets or blocked with anything where any damage may not be noticed.

Power supply unit

The product should be used with power supply unit provided by the manufacturer only.

The power supply unit is fitted out with plug which is intended for connecting to socket in your country usage. In case of the necessity in the product connecting in other country or in the region with other data of electric circuit the power supply unit adopted for use in the specified area should be received from the manufacturer.

Operation

The outer power supply unit of the product is getting warm in operation. In case of outer power supply unit gets hot, switch off promptly and get in touch with the equipment supplier for its replacement.

Protection from atmospheric electricity or not using for a long time.

On coming the thunderstorm and also in case of the product is intended to be in no use for a long time, disconnect the power supply cord out of socket, switch off Ethernet, video and audio cables.

It is to protect the product from thunder discharges and power surges in the circuit..
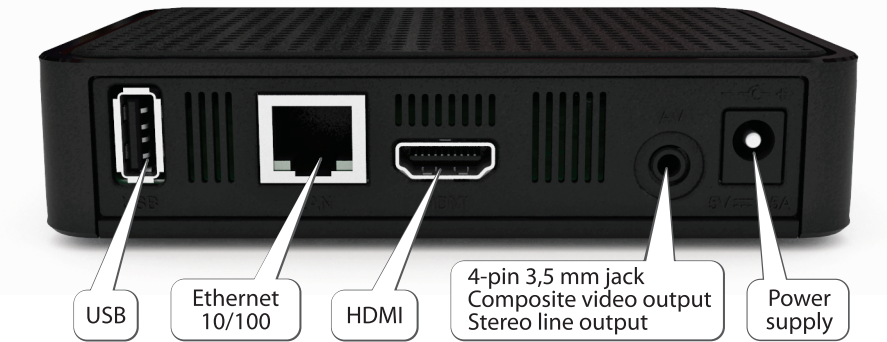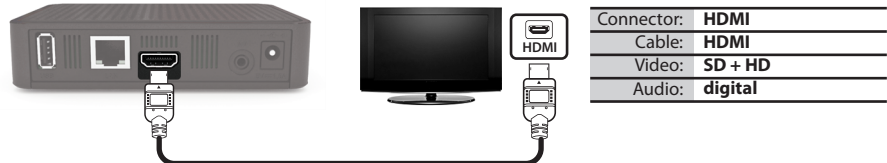
Usage with Plasma Displays

In the product usage for watching with plasma screens do not pause the picture more than 5 minutes, otherwise it may cause 'burn-out' pixels on the screen. It is not considered as a defect of the product but peculiarity of plasma screens structure. The producer does not bear the responsibility for damages had been caused in such manner.

Legal information

The product is designed to receive and record TV pictures and sound signals. Any other use is prohibited.

It means that Blade Media and other partners insists on the product usage in full and entire accordance to the law of copyright. The compliance with the specified laws resides solely with the user. The unauthorized copying of any protected materials or spreading of the specified copies under certain conditions may violate the law of copyright and is strictly forbidden. Blade Media accepts no liability whatsoever.

Updating Software

The product possesses the capability of automatic software updating.

The manufacturer and your services provider reserve the right for automatic software updating to improve the product functional capability.

During the software updating the product should not be used for watching and switched off until the complete software updating.

During the software updating the product switching off is unadvisable. The updating takes several minutes and after this you are able to continue enjoy all delights of digital television services.

The product and accessories are packed into recycled package and plastic bags. Please keep all the packing materials for the further transportation.
Blade Stream is delivered with the following accessories:

Audio/Video cable RCA - 3,5 mm TRRS

Instruction manual

Outer power supply unit

Batteries for IR Remote AA-size 2pcs.

IR remote control

In case of absence of any of the specified accessories please refer to your services provider.
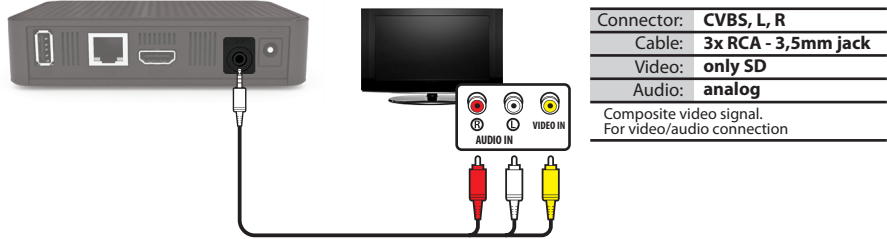
The typical way of connecting the box to a TV is shown in the diagram below:

CONNECTING TO TV-SET WITH HDMI CONNECTOR - BEST QUALITY

Connector:	HDMI
Cable:	HDMI
Video:	SD + HD
Audio:	digital

CONNECTING TO TV-SET (AUDIO/VIDEO INPUT) - GOOD QUALITY

Connector:	CVBS, L, R
Cable:	3x RCA - 3,5mm jack
Video:	only SD
Audio:	analog

Composite video signal.
For video/audio connection

Warning! Switch off all items first (TV, amplifier, etc.) and take power supply out of socket before connecting and adjusting anything.
In case of any problems, disconnect the power to all items before investigating.

Video Connecting

The product allows connecting the following video cables:
• HDMI – provides the best quality of picture and allows playing of digital video of high definition (HD).
• Composite (CVBS) - enables standard picture quality.
Use the connection with the best quality which could be applied with your equipment.
• In case of your TV has HDMI inlet, use HDMI cable for the product connecting to TV through HDMI outlets.
• In case of your TV is capable to operate with connection through component video inlet, use component video cable for the product connecting to TV through component video outlets.

Attention! In all cases follow coloration of connectors and sockets on your equipment.

Audio Connecting

The product allows to conduct the following connections:
• Left and right channels for playing stereo sound through (L and R outlets).

Attention! After the product is unpacked please wait until the set top box naturally warms up to indoor temperature to avoid condensation which may cause short circuit.
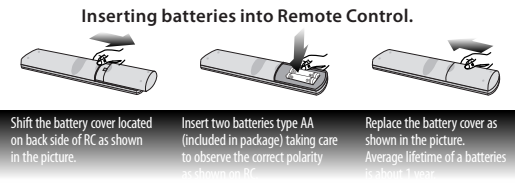
This section explains how to unpack Remote Control (RC) and prepare it for work.

Your service provider can supply the product with an alternative RC. In that case please refer to the manual supplied by your service provider.

Inserting batteries

Remote Control requires two batteries type AA, R6, LR6, UM-3, 316, A316.

Inserting batteries into Remote Control.

Shift the battery cover located on back side of RC as shown in the picture.

Insert two batteries type AA (included in package) taking care to observe the correct polarity

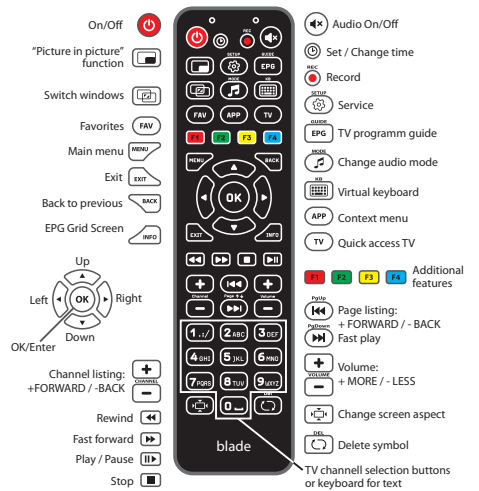Replace the battery cover as shown in the picture. Average lifetime of a batteries

Important information about using batteries

Do not mix different types of battery or old and new batteries.

Do not use rechargeable batteries with the remote control.

Remove the batteries from the remote control if you are not going to use it for several weeks, to avoid the risk of leakage.

Please respect your environment and any local regulations and dispose of old batteries in a responsible manner.

Caution! Do not attempt to recharge the batteries. Immediately remove any leaking batteries. Take care when handling leaking batteries as they may cause burns to the skin or eyes, or other physical injuries.

Your supplier optionally can provide the product with an alternative RC.

Remote Control

On/Off
"Picture in picture" function
Switch windows
Favorites FAV
Main menu MENU
Exit EXIT
Back to previous
EPG Grid Screen

Up
Left Right
Down
OK/Enter

Channel listing: +FORWARD / -BACK
Rewind
Fast forward
Play / Pause
Stop

Audio On/Off
Set / Change time
Record
Service
TV programm guide
Change audio mode
Virtual keyboard
Context menu
Quick access TV

Additional features

Page listing: + FORWARD / - BACK
Fast play
Volume: + MORE / - LESS
Change screen aspect
Delete symbol

TV channell selection buttons or keyboard for text

Remote Control with additional programmable section.

For convenience this RCU has additional section of programmable buttons. You can program these buttons, for example, to control your TV.

RC has two LED lights to indicate of button presses and operational modes. The green indicator lights when any button pressed on the base RC section. Red indicator is used to program buttons from additional section.

Programming the RC:

To programm button from additional section please do as follows:

1. Press "SET" button and hold it for about 2 seconds. When red indicator becomes brighter the RC is ready to program.

2. Press the button you want to program. Red indicator starts blinking.

3. Dispose emitters of two RC opposite each other at a distance 10 mm and press the button on the other RC to be used as a source for programming and hold it for 2 seconds.

4. After three quick blinks red indicator will stop blinking. Now you can program next button.

5. Please program all buttons you needed as described above.

6. Press "SET" button to save all programming progress.

Programmable section
Additional function
Main menu
Exit EXIT
Back to previous BACK
EPG Grid Screen INFO

Up
Left Right
Down
OK / Enter

Channel listing: +FORWARD / -BACK
Change screen aspect
TV channel selection buttons or keyboard for text

On / Off
SET Setting menu
Audio On / Off
Change audio mode
Virtual keyboard
APP Context menu
TV Quick access TV
Page listing: + FORWARD / - BACK
Fast play
Volume: + MORE / - LESS
Rewind
Fast forward
Play / Pause
Stop
Delete symbol